

# **Flare / solder adaptor** Type FSA

Technical leaflet

Danfoss

## **Technical leaflet**

Flare / solder adaptor, type FSA

#### Introductio

Introduction						
	MM					
	With the flare / solder adaptor, type FSA, flare connections can be easily and reliably changed to solder connections. The adaptor provides a method of joining that preserves the advantages of flare connections, i.e. easy and fast component replacement. At the same time, the flare / solder adaptor also provides the advantage of soldered joints, i.e. a high degree of tightness that prevents leakage. The adaptor contains no soft gaskets or O-rings which age and loose their sealing properties. Instead, it contains a copper seal which protects	the flare collar against wear and fatigue. This copper seal ensures a thightness similar to that of soldered joints. The copper seal must be changed each time the adaptor is dismantled for servicing flare components. Frost grooves in the nut mean that the adaptors are suitable for wet environment, where the temperature is below the water freezing point. The nut cannot be loosened by encapsulated ice formation.				
Application	The flare / solder adaptor, type FSA, is for use where servicing or some other factor makes a "genuine" solder connection impractical.	The adaptor can be used with advantage for components with flare connections on: - pressure controls - filter driers - sight glasses, etc.				
Standards	DIN 8964, which stipulates a maximum leak rate for refrigeration plant of $< 6.4 \times 10^{-6}$ mbar l/s at a differential pressure of 10 bar He.	The Dutch refrigeration standard (9.12.94/IBP 07d 94007, part 2.2.8.2.): In variation to regulation 2.2.8.1 flanged joints, compression joints, quick-couplings, flat or conical packing or trapped O-rings will be permitted, but only if the packing or O-ring provide the seal and are replaced if the joint is disconnected and then remade.				
Technical data	<ul> <li>Refrigerants HFC, HCFC, CFC and other fluorinated refrigerants</li> <li>Max. working pressure PS = 46 bar</li> <li>Leak rate Max. 1 g / year</li> </ul>	<ul> <li>Max. tightening torque         <sup>1</sup>/4 in. / 6 mm: 20 Nm         <sup>3</sup>/8 in. / 10 mm: 30 Nm         <sup>1</sup>/2 in. / 12 mm: 60 Nm         <sup>5</sup>/8 in. / 16 mm: 100 Nm         <sup>3</sup>/4 in. / 18 mm: 200 Nm         <sup>3</sup>/4 in. / 18 mm         <sup>3</sup>/4 in. / 18 mm</li></ul>				
Type designation	<i>Example</i> FSA 36m Flare/ solder adapter Flare nut in eighth of an inch	FSA 3 6 m				
	2 = 1/4 in. or 6 mm, 3 = 3/8 in. or 10 mm, 4 = 1/2 5 = 5/8 in. or 16 mm, 6 = 3/4 in. Solder connection					

2 = 1/4 in., 3 = 3/8 in., 4 = 1/2 in., 6 = 3/4 in. 6m = 6 mm, 10m = 10 mm, 12m = 12 mm, 16m = 16 mm or 5/8 in., 18m = 18 mm

Danfoss

# **Technical leaflet**

## Flare / solder adaptor, type FSA

Ordering

## Flare / solder adapter set, 2 pcs.


Туре	Connection flare × solder in.	Code no. for 2 pcs.	Туре	Connection flare × solder mm	Code no. for 2 pcs.
FSA 22	1/ × 1/	023U8002	FSA 26m	1/4 × 6	023U8001
FSA 33	$3/\frac{3}{8} \times 3/\frac{3}{8}$	023U8004	FSA 310m	³/ <sup>°</sup> × 10	023U8003
FSA 44	1/2 × 1/2	023U8006	FSA 412m	½×12	023U8005
FSA 516m	$5/_{8}^{2} \times 5/_{8}^{2}$	023U8007	FSA 516m	⁵/, × 16	023U8007
FSA 66	${}^{3}/_{4}^{\circ} \times {}^{3}/_{4}^{\circ}$	023U8010	FSA 618m	<sup>3</sup> / <sub>4</sub> <sup>°</sup> × 18	023U8009

## Flare / solder adapter set, 1 pc

Туре	Connection flare × solder in.	<b>Code no.</b> for 1 pc	Туре	Connection flare × solder mm	<b>Code no.</b> for 1 pc
FSA 22	$1/_{4} \times 1/_{4}$	023U8012	FSA 26m	¹/₄× б	023U8011
FSA 32	$3/_{8} \times 1/_{4}$	023U8022	FSA 36m	$\frac{3}{8} \times 6$	023U8021
FSA 33	$\frac{3}{8} \times \frac{3}{8}$	023U8014	FSA 310m	<sup>3</sup> / × 10	023U8013
FSA 44	1/, × 1/,	023U8016	FSA 412m	½ × 12	023U8015
FSA 516m	$5/\frac{2}{8} \times 5/\frac{2}{8}$	023U8017	FSA 516m	<sup>5</sup> / <sub>8</sub> × 16	023U8017
FSA 66	$3/_{4} \times 3/_{4}$	023U8020	FSA 618m	<sup>3</sup> / <sub>4</sub> <sup>3</sup> × 18	023U8019

Accessories				
Copper seal	Size	Qty.	Code no.	
B2 - 4 spec. B2 - 6 B2 - 8 B2 - 10 B2 - 12	<sup>1</sup> / <sub>4</sub> in. / 6 mm <sup>3</sup> / <sub>8</sub> in. / 10 mm <sup>1</sup> / <sub>2</sub> in. / 12 mm <sup>5</sup> / <sub>8</sub> in. / 16 mm <sup>3</sup> / <sub>4</sub> in. / 18 mm	300 300 200 100 50	011L4025 011L4017 011L4018 011L4019 011L4020	

# **Dimensions and weight**

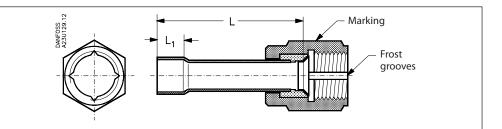

	Connection		L	L,		Weight
Туре	Flare in.	Solder ODF	mm	mm	Stamping	kg
FSA 22 FSA 26m	1/ 1/4 1/4	<sup>1</sup> / <sub>4</sub> in. 6 mm	39 39	7 7	ММ	0.05 0.05
FSA 32 FSA 36m FSA 33 FSA 310m	3/ 3/8 3/8 3/8 3/8	<sup>1</sup> /₄ in. 6 mm <sup>3</sup> / <sub>8</sub> in. 10 mm	39 50 50 50	7 7 9 9	MM MM	0.09 0.09 0.09 0.09
FSA 44 FSA 412m	1/2 1/2	<sup>1</sup> / <sub>2</sub> in. 12 mm	57 57	10 10	ММ	0.11 0.11
FSA 516m FSA 516	5/ 5/8 5/8	⁵/ <sub>8</sub> in. 16 mm	57 57	12 14	MM	0.14 0.14
FSA 66 FSA 618m	3/ <sub>4</sub> 3/ <sub>4</sub>	³/₄ in. 18 mm	68 68	14 14	ММ	0.28 0.28

<u>Danfoss</u>

#### **Technical leaflet**

Flare / solder adaptor, type FSA

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.